


HOW TO ASSY OF SCS1

(STEP1)
Thread CORD through CASE.

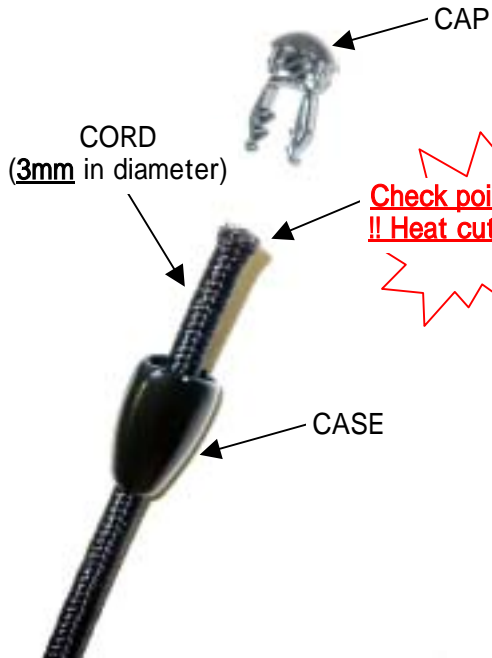

(STEP2)
Set CORD in CAP.



<pic-A> part structure

<pic-B> CORD assy state

(STEP3)
Make SUB ASSY STATE.
Pinch prongs on CORD and set CAP in CASE.



<pic-C> SUB ASSY STATE

HOW TO ASSY OF SCS1


(STEP4)
Make COMPLETION STATE.
Pull CORD with CAP into CASE.
Push CAP into CASE to lock.



Slide CASE and pull CORD (like pic-D).
CAP will be set in CASE.

<pic-D> CAP set assy state

(STEP5)
Check COMPLETION STATE.

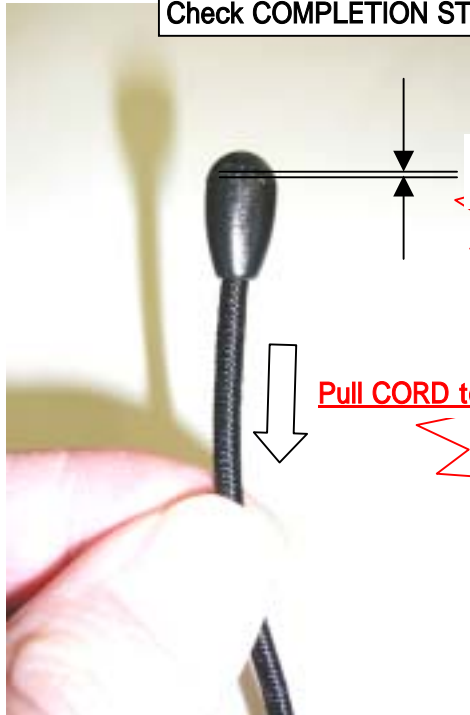

Check point
!! No gap !!

Pull CORD to check LOCK strength.

<pic-E> COMPLETION STATE.